

2010 SELF USE TRAP SAFETY AND OPERATING INSTRUCTIONS

You have been oriented on the safe use of the trap and as the cardholder you are the club's representative for safety purposes when you operate the trap. **You are the range master. Safety for the shooters and safe operation of the trap is foremost in the interests of the Ikes. The trap house is equipped with a ground fault interrupt "GFI". It is housed in the plug-in on the left side of the trap house as you look into the house. The GFI controls both plug-ins but not the light.**

OPERATING THE TRAP

As you are standing in front of the trap and looking in; **the main power switch is at the base of the trap on the left hand side.** It is a simple on/off switch. **Just below the main power switch is a three-way switch that operates the machines oscillating function.** In the up or "auto" position the machine oscillates. By pushing the switch down you can "jog" the machine to a desired rock-throwing angle. Release the switch and it pops up to the center which is the off position. The machine now will throw rocks at the same angle until it is changed. **The throwing arm switch on the right hand wall just inside the door is used to throw the loaded rock and makes the machine safe.** Push the switch all the way down and the loaded rock will be thrown. Release the switch and it pops up to the center or off position. The machine is now safe to work around, and to load rock into the carousel. In order to restore the machine to use, the switch must be flipped up to the on position and a rock will be loaded.

The elevation adjustment is a turnbuckle just forward of the main power switch. To raise or lower the angle of the rocks, loosen the nut at the top of the turnbuckle with the crescent wrench chained to the base of the machine and then twist the turnbuckle to get the desired results.

To start using the trap follow the three steps listed below.

- 1. Plug in the trap.**
- 2. Turn on the main power switch. (Switch at the base of the machine, left side).**
- 3. Unroll the pull cord.**
- 4. Put the throwing arm switch in the on position. (Switch on the right trap house wall).**

CLOSING UP THE TRAP HOUSE

- 1. Put the throwing arm in the safe position.**
- 2. Turn off the main power switch.**
- 3. Unplug the trap machine.**
- 4. Fill the carousel with rocks and scoop out the broken rocks of the trap house floor.**
- 5. Wrap up the cord.**
- 6. Record your shooting on the clipboard and pay the cash box.**
- 7. Close the front door to the trap house and lock it.**
- 8. Take the empty card board boxes to the dumpster west of the green steel building.**